


***SD = Single Density Red LED Active***

***ED = Enhanced Density Yellow LED Active***

***DD = Double Density Green LED Active***

***Hardware Reset = Take the Mega Speedy out of Firmware Mode into a 3 second Change or the Mega Speedy will Auto Select E1.***

***Select & Set = Is a Rotary Select Switch with Push Button to Select Firmware!***

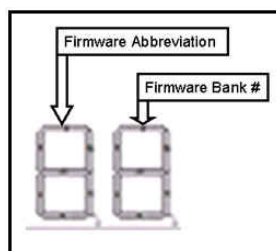

### ***Different Modes the Mega Speedy Can Operate As***

- "E" Mega Speedy
- "S" Super Speedy
- "y" Speedy
- "o" original 1050
- "t" 1050 Turbo
- "H" Happy
- "U" US Doubler
- "A" Super Archiver
- "d" 1050 Duplicator
- "u" SuperMax
- "FL" Program your FLASH Rom